



MANUAL PROGRAMMING

Operator Model	Doc. Rev.	CRC Code	Firmware
Liftmaster Mega Arm / Sprint MADCBB, MATDCBB, MASDCBB, & MASTDCBB	RP 4-10-20	N/A	GAT-190214


Select the Profile Mode

Power on the LED Controller. Look at the amber status LED near the mode button. Hold the mode button down for about 3 seconds to cycle through the modes. Please select Mode 3 as indicated below.

Custom Profile Mode		Slowly fading in and out
Profile Mode 1, Factory Reset		Steady Light
Profile Mode 2		Flashing about once per second
Profile Mode 3	✓	Rapid flashing

GATE ARMS+

Configuration – Select & Invert the Close Signal

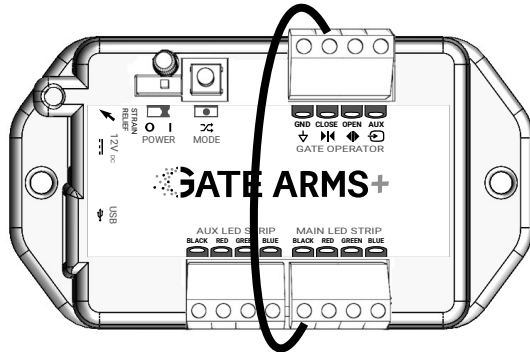

- Insert the jumper as shown to the left. You may also use a jumper with alligator clips.
- Hold the Mode button down and, while keeping it held down, set the power switch to the ON position. Let go of the Mode button. The amber status LED will rapidly blink and then turn off.
- Turn the power switch off.
- Remove the jumper wire.

Finishing Up

You may now reinstall the AC signal converter and reconnect the live wires as shown in the provided schematic.